


i geometrici | shelf
 Prima dell'installazione vedere norme CEI nel nostro sito.
 Before installing check CEI standards on our website.
 Note: Protection against electric shock available (earthing and bonding)

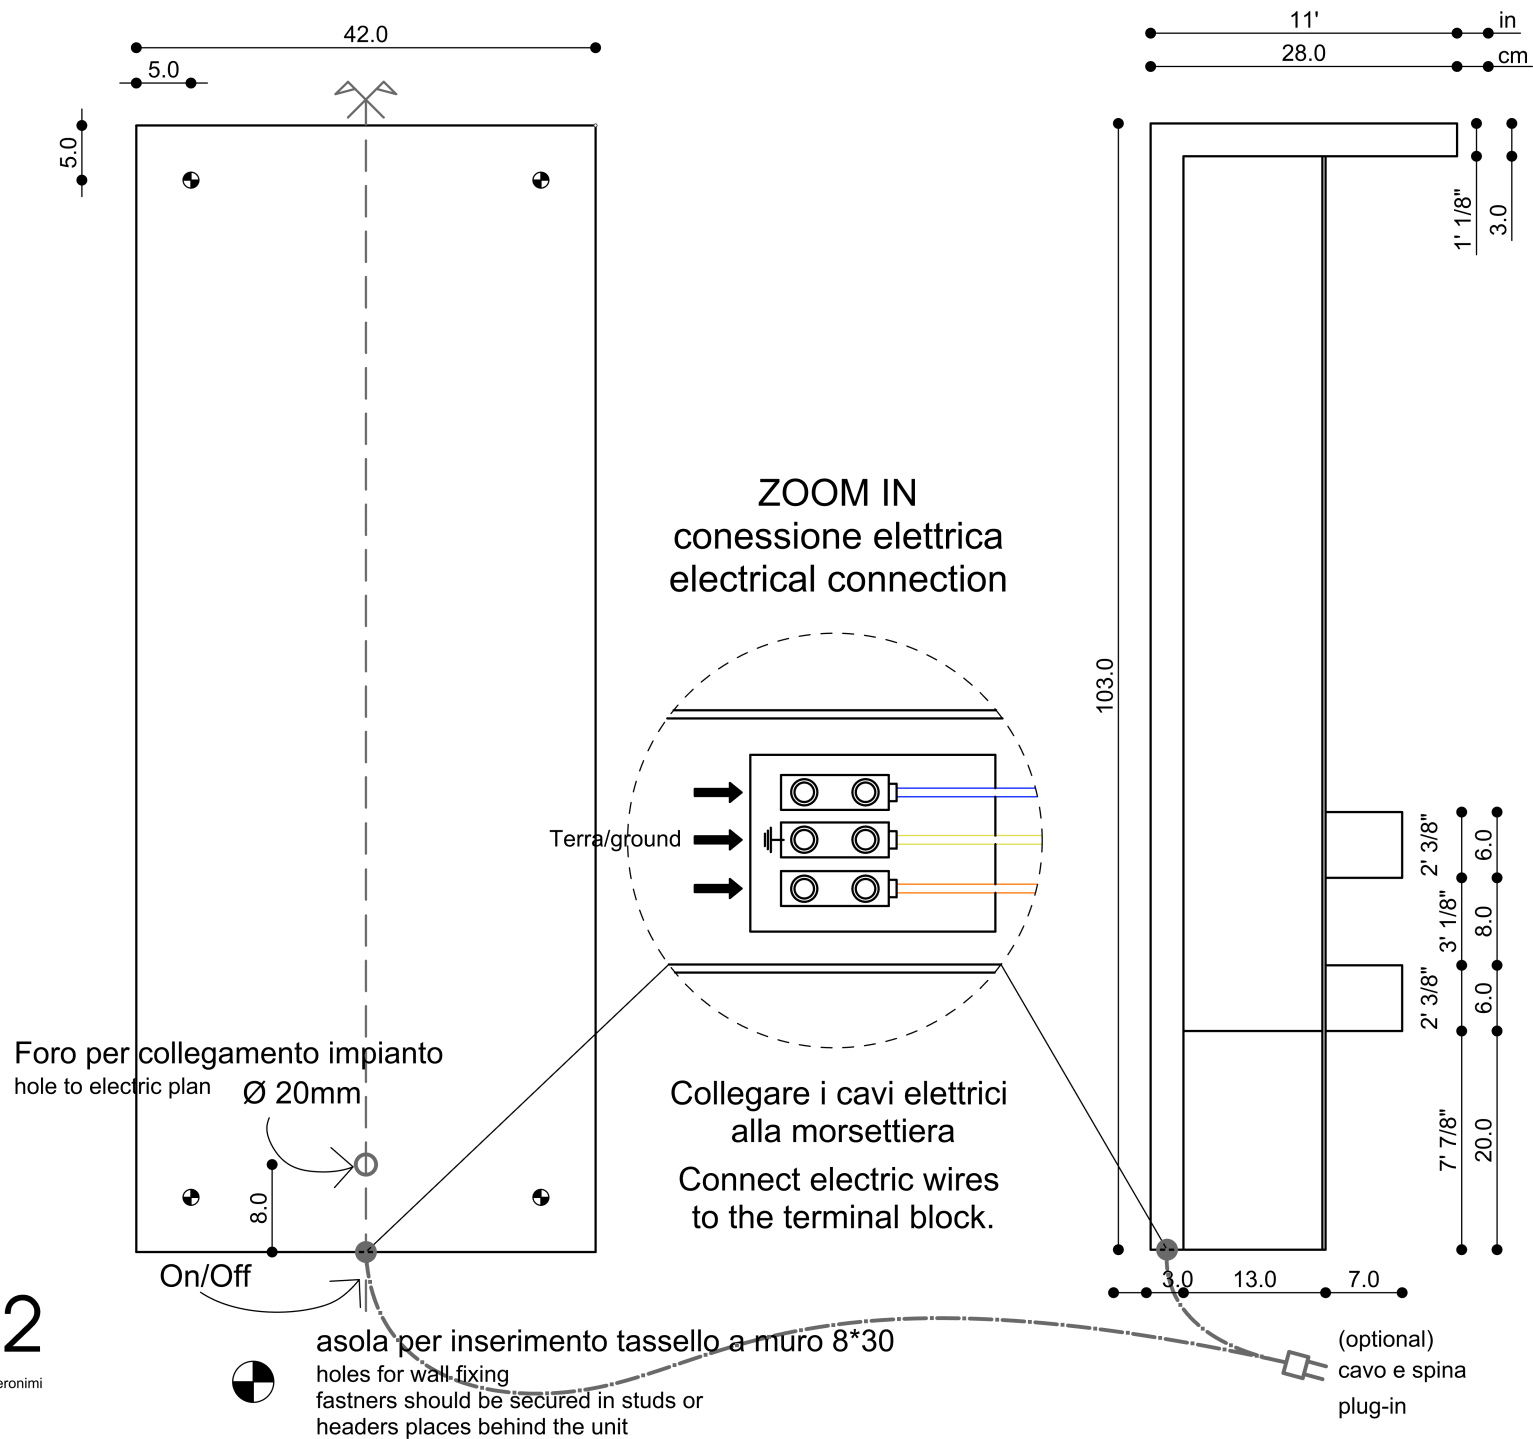

mg12 S.r.l.
 viale R. Margherita, 33
 20122 Milano
 tel. 0233605330



1- Svitare le due viti posizionate sotto lo scaldasalvietta. Rimuovere i due ganci interni per gli asciugamani: per ogni gancio, svitare il grano e la vite di raccordo tra il gancio ed il pannello posteriore. Rimuovere quindi il pannello posteriore dello scaldasalvietta.

2- Utilizzare i 4 tasselli e le 4 viti in dotazione (nelle apposite asole ai 4 angoli) per fissare al muro il pannello posteriore appena rimosso.

3-Effettuare il collegamento elettrico.

4- Riagganciare lo scaldasalvietta sul pannello fissato al muro. Riavvitare le due viti poste sotto lo scaldasalvietta e infine riavvitare i due ganci interni per gli asciugamani.

1- Unscrew the two screws located under the towel warmer. Remove the two interior towels hooks: for each hook, unscrew the grub screw and the screw connecting the hook to the rear panel. Then remove the rear panel of the towel warmer.

2-Use the supplied 4 dowels and 4 screws (in the designated holes at the 4 corners) to fasten to the wall the rear panel just removed.

3-Make the electric connection.

4-Hook the towel warmer back to the panel fastened to the wall. Rescrew the two screws located under the towel warmer and finally rescrew the two interior towels hooks.